

**TOP** (X edge)

USE AN 11/16” DRILL BIT  
So it will be easy to push  
threaded rods through

**Side A**

2.5” from X edge (the straight edge  
below angled top)

**SIDE A**


**TOP** (X edge)

USE AN 11/16” DRILL BIT  
So it will be easy to push threaded  
rods through

**Side B**

Top drill, 3.5” from X edge (the straight  
edge below angled top)

**SIDE B**

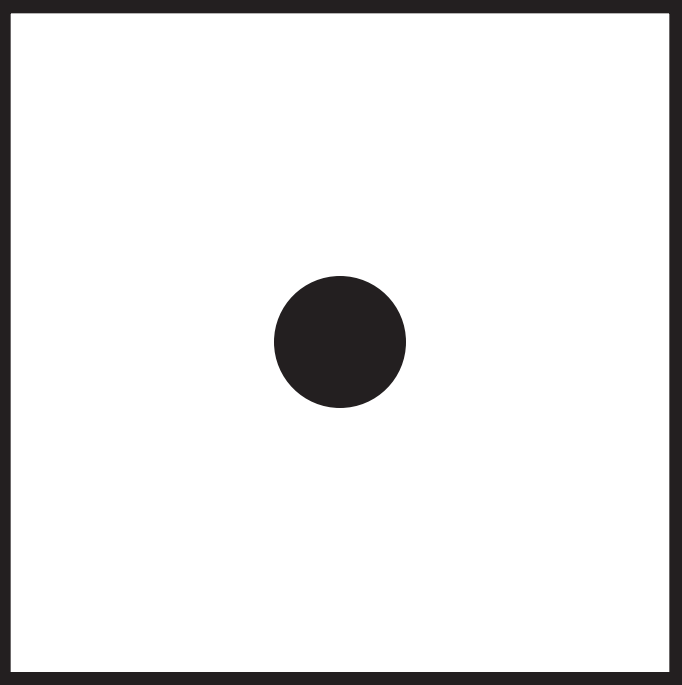

**Bottom**  
centered by 2-3” deep or enough  
to anchor electrical tubing that will  
anchor the guard to the ground

Bottom drill, 10.5” from X edge  
(the straight edge below angled top)

Bottom drill, 11.5” from X edge  
(the straight edge below angled top)